



Light Indicator SLL-400

User Manual

Please read the user manual carefully before start using the device.

Table of Contents

Getting Started

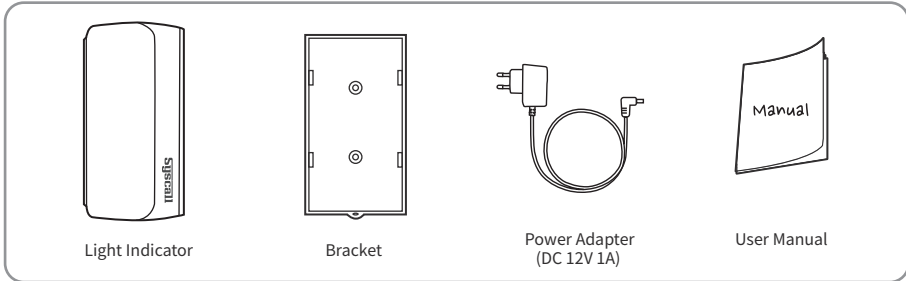
1. Components & Specification	3
2. Device Layout & Installation	3
3. Set Button	4

Function Setting

4. Bell Registration	5
5. Clear Bell Registration	5
6. LED Light Type Setting	6
7. Buzzer Volume Setting	7
8. Alert Time Setting	8
9. Initialization	8

1. Components & Specification

Components




Specification

Frequency	FSK/433.42MHz
Input Voltage	12V
Current Consumption	Standby: 45mA/ Operate: 600mA
Dimension	W82 x L156 x H79.5(mm)/365g
Color	Red, White

Features

1. Receive the signal of transmitter and output an alarm
2. Register up to 200 call bells
3. Register up to 10 clear bells

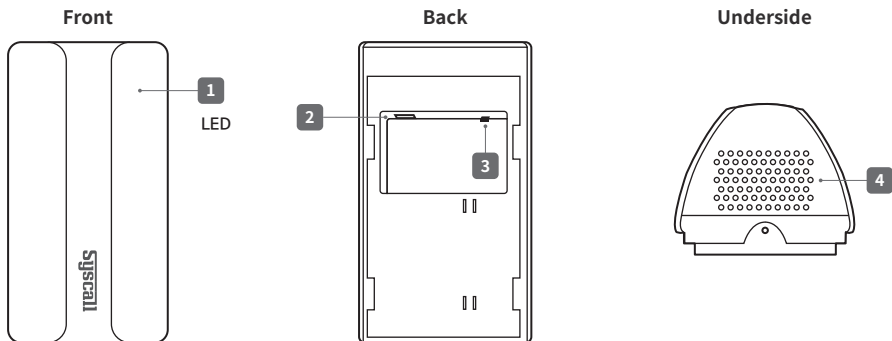
2. Device Layout & Installation




- 1 LED:** LED will blink when receiving the signal from the transmitter.
- 2 Adapter connector jack:** Plug-in the adapter and insert the connector in to the jack.
- 3 Set Button:** Setting or Initialization
- 4 Buzzer:** Buzzer will sound when receiving the signal from the transmitter.

Installation

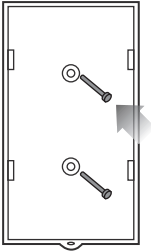
1 Fix the bracket on the wall.



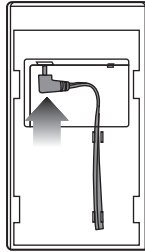2 Plug-in the adapter and insert the connector in to the jack.



3 Tighten a screw in the bottom.

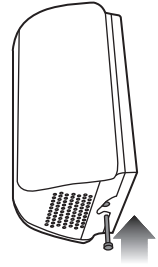


⚠ Caution

Please use the device only with the power adapter (12V/1A) provided by manufacturer.

3. Set Button

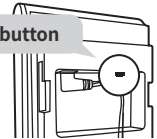Set button



Turn on the SLL-400 by connecting the adapter before setting.




Button Controls	Function	Beep sound
Click once	Clear the alarm	Beep
Double-click	Exit the menu / Save	Beep, Beep, Beep
Press and hold the button for 2 sec	Shift the menu	Beep, Beep
Press and hold the button for 3 sec	Enter the menu	Beep, Beep, Beep~~
Press and hold the button for 5 sec	Alert time setting	Beep, Beep, Beep~~, Beep~~, Beep~~
Press and hold the button for 10 sec twice	Initialization	Beep, Beep, Beep~~, Beep~~Beep~~, Beep~~~~~ Beep, Beep, Beep~~, Beep~~Beep~~, Beep~~~~~

How to enter and shift the menus

Bell Registration	>	Clear Bell Registration	>	LED Light Type Setting	>	Siren Alert Setting	>	Exit
Press and hold the button for 3 sec		Press and hold the button for 2 sec		Press and hold the button for 2 sec		Press and hold the button for 2 sec		Double-click
🔊 Beep, Beep, Beep~~		🔊 Beep, Beep		🔊 Beep, Beep		🔊 Beep, Beep		🔊 Beep, Beep, Beep

4. Bell Registration

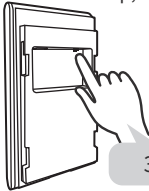
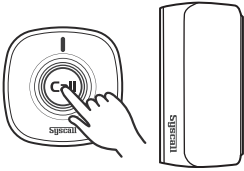
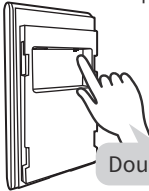
Register up to 200 call bells

1. Enter the menu	2. Press the bell	3. Exit the menu
<p>Beep, Beep, Beep~</p>  <p>3 sec</p> <p>Press and hold the set button for 3 sec</p>	<p>Beep!</p>  <p>Press the bell to register</p> <ul style="list-style-type: none"> - Registered: Beep once - Already registered: Double beep 	<p>Beep, Beep, Beep</p>  <p>Double-click</p> <p>Double-click the set button to exit</p>


* Default: Delay time 10 sec to avoid duplication

5. Clear Bell Registration

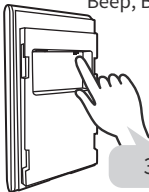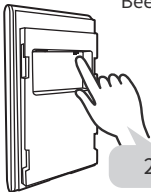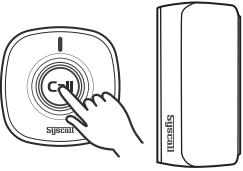Register up to 10 clear bells




1. Enter the menu	2. Shift the menu	3. Press the bell
<p>Beep, Beep, Beep~</p>  <p>3 sec</p> <p>Press and hold the set button for 3 sec</p>	<p>Beep, Beep</p>  <p>2 sec</p> <p>Press and hold the set button again for 2 sec</p>	<p>Beep!</p>  <p>Press the bell to register</p> <ul style="list-style-type: none"> - Registered: Beep once - Already registered: Double beep

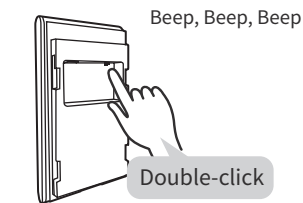4. Exit the Menu




Double-click the set button to exit

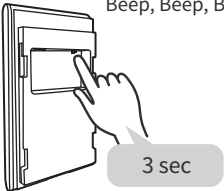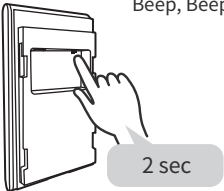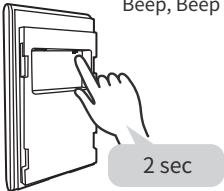6. LED Light Type Setting (Default: LED Type 2)


1. Enter the menu	2. Shift the menu	3. Shift the menu
		
<p>Press and hold the set button for 3 sec</p>	<p>Press and hold the set button again for 2 sec</p>	<p>Press and hold the set button again for 2 sec</p>

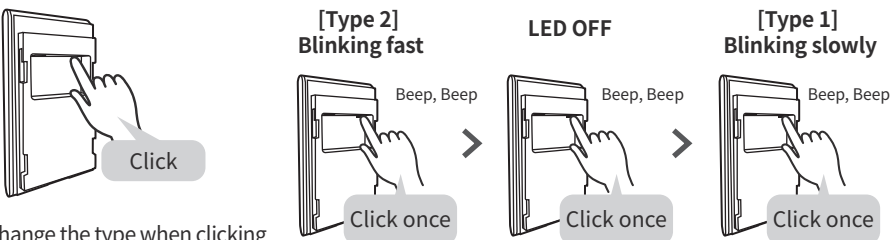4. Setting



Change the type when clicking [Type 2 - LED OFF - Type 1]





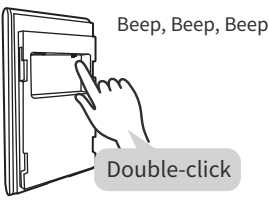
5. Save & Exit







*** LED Type**
 Type 1: Blinking slowly
 Type 2: Blinking fast


Double-click the set button to save and exit

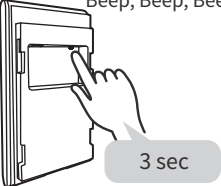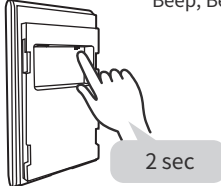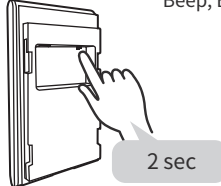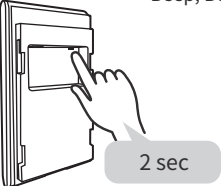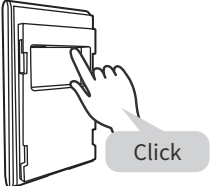7. Buzzer Volume Setting (Default: HIGH)

<p>1. Enter the menu</p> <p>Beep, Beep, Beep~~</p>  <p>3 sec</p> <p>Press and hold the set button for 3 sec</p>	<p>2. Shift the menu</p> <p>Beep, Beep</p>  <p>2 sec</p> <p>Press and hold the set button again for 2 sec</p>	<p>3. Shift the menu</p> <p>Beep, Beep</p>  <p>2 sec</p> <p>Press and hold the set button again for 2 sec</p>
<p>4. Shift the menu</p> <p>Beep, Beep</p>  <p>2 sec</p> <p>Press and hold the set button again for 2 sec</p>	<p>5. Setting</p>  <p>Click</p> <p>Change the volume when clicking [HIGH - OFF - LOW - MID]</p>	

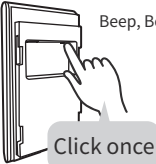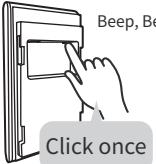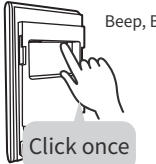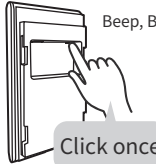HIGH	BUZZER OFF	LOW	MID
 <p>Beep, Beep</p> <p>Click once</p>	 <p>Beep, Beep</p> <p>Click once</p>	 <p>Beep, Beep</p> <p>Click once</p>	 <p>Beep, Beep</p> <p>Click once</p>

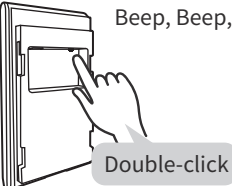6. Save & Exit






Beep, Beep, Beep

Double-click

Double-click the set button to save and exit

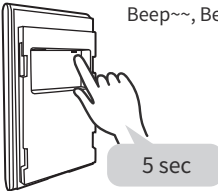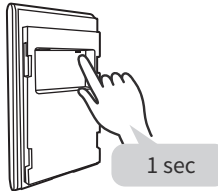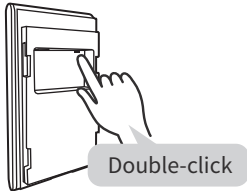8. Alert Time Setting (Default: 10sec)




1. Enter the menu	2. Setting	3. Save & Exit
<p>Beep, Beep, Beep~~, Beep~~, Beep~~</p>  <p>5 sec</p> <p>Press and hold the set button for 5 sec</p>	<p>Beep, Beep, Beep~~, Beep~~, Beep~~</p>  <p>1 sec</p> <p>Press and hold the set button for 1sec to change the alert time (Refer to the table below)</p>	<p>Beep, Beep, Beep</p>  <p>Double-click</p> <p>Double-click the set button to save and exit</p>

* Press the button for 3sec to set alert time unlimited

Alert Time Setting Table

No.	Alert Time	Beep Sound	No.	Alert Time	Beep Sound
1	1 sec	Beep, Beep	7	3 min	Beep, Beep
2	3 sec	Beep, Beep	8	5 min	Beep, Beep
3	5 sec	Beep, Beep	9	10 min	Beep~
4	10 sec (Default)	Beep~	10	30 min	Beep, Beep
5	30 sec	Beep, Beep	11	60 min	Beep~ Beep~
6	1 min	Beep~	12	Unlimited	Beep~

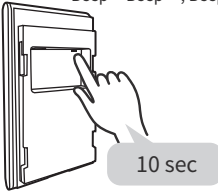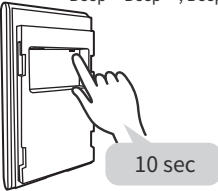9. Initialization

1. Enter the menu	2. Setting	3. Completed
<p>Beep, Beep, Beep~~, Beep~~Beep~~, Beep~~~~</p>  <p>10 sec</p> <p>Press and hold the button for 10 sec</p>	<p>Beep, Beep, Beep~~, Beep~~Beep~~, Beep~~~~</p>  <p>10 sec</p> <p>Press and hold the button again for 10 sec</p>	<p>Beep!</p>  <p>A short beep will sound, once it is initialized. It will take about 30 sec.</p>

syscall



Syscall

- NETWORKS Bldg, 5-10, Tongil-ro 89-gil, Eunpyeong-Gu, Seoul, Korea
- TEL: +82-2-352-8677 FAX: +82-2-352-8672
- WEB: www.syscallglobal.com E-mail: sales@syscallglobal.com