



Server Paging Transmitter **DT-5020**

User Manual

Please read the user manual carefully before start using the device.

Table of contents

Getting Started


1. Components & Specification	3
2. Installation	3
3. Description	4

Functions

4. Functions	
4-1. Preset Message Setting	5
4-2. Channel Number Setting	6
4-3. Beep & Haptic Feedback Setting	6
4-4. RF Output Power Control	6
5. How to Use DT-5020	
5-1. How to Call a Direct Pager	7
5-2. How to Use the Call History	7
5-3. How to Connect with a Repeater	8

1. Components & Specification

Components

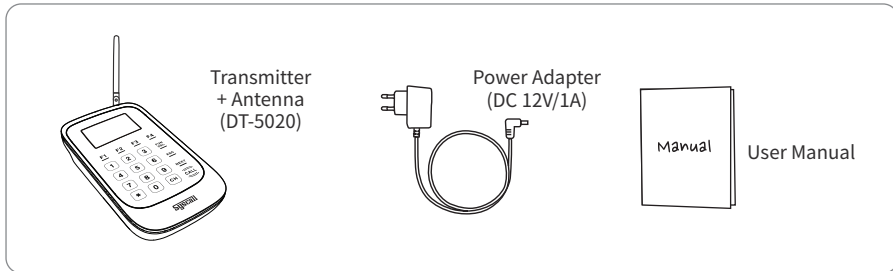


Specification

Frequency	FSK/433.42MHz
Power Source	DC 12V/1A
Dimension	W100 X L177 X H33mm
Weight	200g
Color	Black

Features

1. Smart touch keypad
2. Send 4 preset messages up to 99 pagers
3. Alphanumeric messages up to 10 digits
4. Able to check up to 20 call history

2. Installation

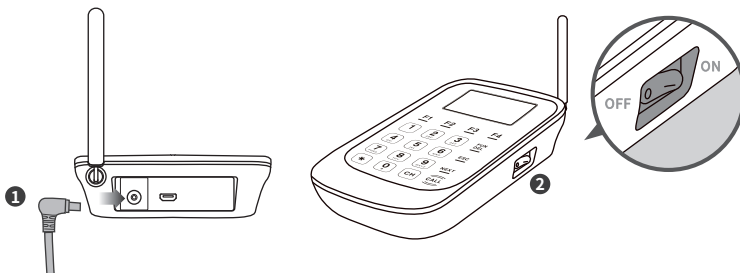


- 1 Plug the power adapter and insert the connector into the port next to the antenna.
- 2 Turn on the power switch on the right side of the transmitter.
- 3 Set the same Pn (Channel number) of both DT-5020 and Direct pagers to connect.

*For more details, please refer to Direct pager user manual.

3. Description

Keypad Description

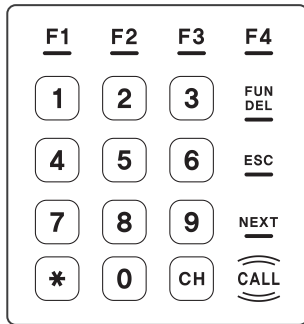

F1 ~ F4 Choose preset messages

FUN DEL Enter the function setting/ Delete

ESC Cancel/ Exit

NEXT Menu shift


CALL Save/ Call

CH Call history check/
Convert the letter to uppercase or lowercase

***** Activate the character list

Display Description

1 Home Screen Display

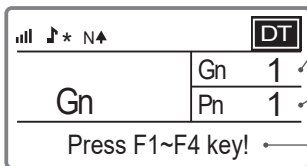


Gn: Last called server number

*Gn keeps changing whenever another server is called

Pn: Channel number

Check preset messages

2 Call History Display

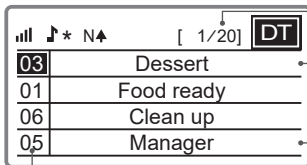

Total number of call history

Preset messages


Gn: Called server number

Description of Functions

Functions		Default	Range
Preset Message Setting	F1	1	-
	F2	2	-
	F3	3	-
	F4	4	-
Channel Number Setting	Pn	1	1~99
Beep & Haptic Feedback Setting	SV	3	0(Beep-OFF, Vibration-OFF)
			1(Beep-ON, Vibration-OFF)
			2(Beep-OFF, Vibration-ON)
			3(Beep-ON, Vibration-ON)
RF Output Power Control	RP	2	1~2

4. Functions


How to Enter the Function Setting

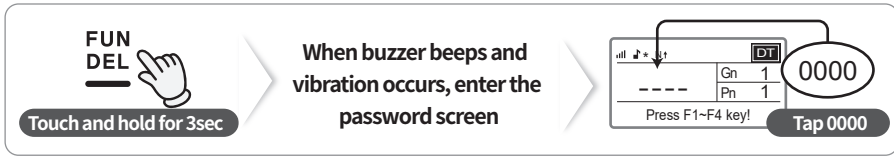

⚠ When the function setting is finished, tap **ESC** to exit from the settings.

4-1. Preset Message Setting [F1~F4]

Edit each preset message in F1, F2, F3, and F4.

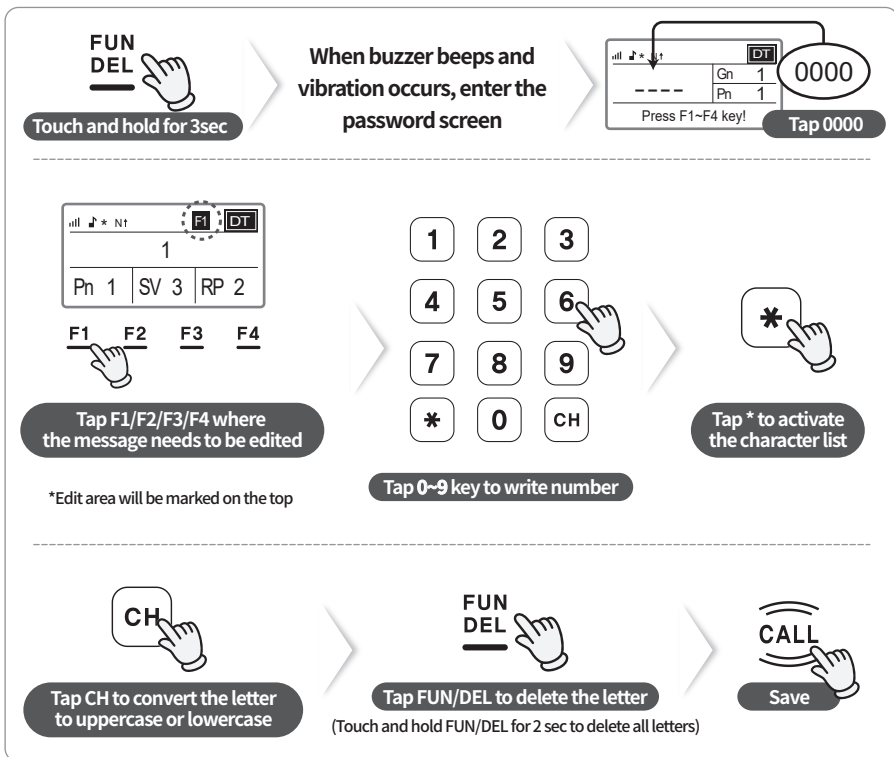

⚠ Maximum of 10 characters can be written.

(Recommend to set 'A10 Display' in Display Type Setting of Direct pagers.)

4-2. Channel Number Setting [Pn]

Set the same Pn (Channel number) of both DT-5020 and Direct pagers to connect.

The diagram illustrates the process of setting the Channel Number (Pn) in two rows. Each row starts with a 'FUN DEL' button being touched and held for 3 seconds. This leads to a screen where a password is entered (0000) when a buzzer beeps and vibration occurs. The first row shows the 'Pn' field being set to '1' and the 'CALL' button being saved. The second row shows the 'Pn' field being set to '1' and the 'CALL' button being saved.

Row 1: Touch and hold for 3sec → When buzzer beeps and vibration occurs, enter the password screen → Tap 0000 → Enter the Pn (1) → Save

Row 2: Move on 'Pn' → Enter the Pn (1) → Save

4-3. Beep & Haptic Feedback Setting [SV]

Turn ON/OFF the beep sound & haptics of the transmitter.

The diagram illustrates the process of setting Beep & Haptic Feedback (SV) in two rows. Each row starts with a 'FUN DEL' button being touched and held for 3 seconds. This leads to a screen where a password is entered (0000) when a buzzer beeps and vibration occurs. The first row shows the 'SV' field being set to '3' and the 'CALL' button being saved. The second row shows the 'SV' field being set to '3' and the 'CALL' button being saved.

Row 1: Touch and hold for 3sec → When buzzer beeps and vibration occurs, enter the password screen → Tap 0000 → Choose 0~3 (3) → Save

Row 2: Move on 'SV' → Choose 0~3 (3) → Save

Legend:

- 0 OFF
- 1 Beep
- 2 Vibration
- 3 Beep+Vibration

4-4. RF Output Power Control [RP]

Able to set the RF output power of the transmitter.

The diagram illustrates the process of setting RF Output Power (RP) in two rows. Each row starts with a 'FUN DEL' button being touched and held for 3 seconds. This leads to a screen where a password is entered (0000) when a buzzer beeps and vibration occurs. The first row shows the 'RP' field being set to '2' and the 'CALL' button being saved. The second row shows the 'RP' field being set to '2' and the 'CALL' button being saved.


Row 1: Touch and hold for 3sec → When buzzer beeps and vibration occurs, enter the password screen → Tap 0000 → Set the RF output power (2) → Save

Row 2: Move on 'RP' → Set the RF output power (2) → Save

Range: 1-2


5. How to Use DT-5020

5-1. How to Call a Direct Pager

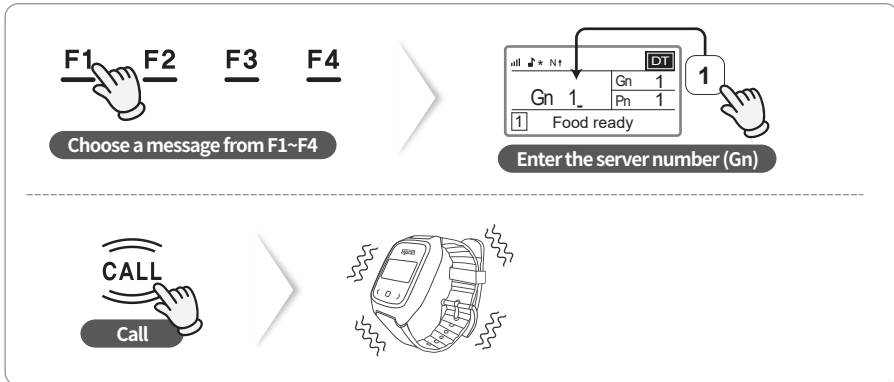

⚠ Caution! Set the same Pn (Channel number) of both DT-5020 and Direct pagers.

5-2. How to Use the Call History

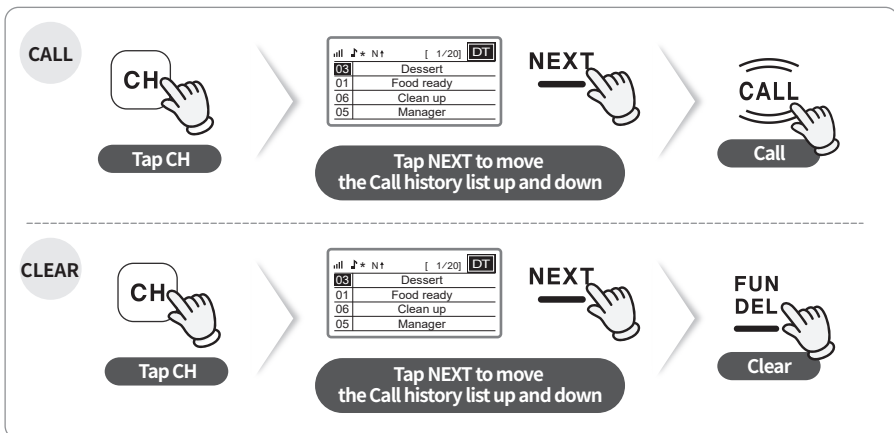


⚠ Call history can be stored up to 20 in the list.

5-3. How to Connect with a Repeater

⚠ Caution! Please follow the steps below in a row.

STEP 1. Pn (Channel number) Setting in [d1], SRT-8200

1. Press and hold O for 9sec until "d1" is displayed.

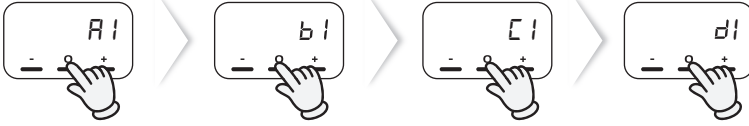

2. Press O to enter the setting mode.



3. Move to the next digit by pressing - or +, then press O to enter the Edit mode.

4. Set the same Pn with DT-5020 by pressing - or +.



* If repeats all DT-5020 signals, leave it as '0'.

* Range: 0-99 [Default: 0]

5. Press O for 2sec to save.

 


STEP 2. Reception mode ON in [d2], SRT-8200

1. Press + once and then, press O to enter the setting mode. [d2]



2. Select '1' by pressing + and then, press O for 2sec to save.



* '0'= OFF, '1'= ON [Default: 0]

STEP 3. Repeater mode ON in [d3], SRT-8200

1. Press + once and then, press 0 to enter the setting mode. [d3]



2. Select '1' by pressing + and then, press 0 for 2sec to save.



* '0'= OFF, '1'= ON [Default: 0]

3. Press - or + together to exit from the setting mode.



* For more details, please refer to SRT-8200 user manual.

Memo



syscall



Syscall

- **SYSCALL France - www.syscallglobal.fr
0033 (0)1 84 17 61 81 - contact@syscall.fr
242 boulevard de Stalingrad 94500 Champigny sur Marne
FRANCE**

Manufacturer

- **NTTWORKS CO., LTD
413-9 NTTWORKS Bldg, Galhyun-Dong, Eunpyong-Gu Seoul
KOREA**